

Dosflash Utility SOP

1. Copy “DOS” file to USB disk.
2. Enter DOS mode and execute batch file “P01-A3”.
3. Process to flash BIOS.

```
A:\>CD DOS
A:\DOS>P01-A3
+-----+
|               AMI Firmware Update Utility  v4.XX               |
|      Copyright (C)2009 American Megatrends Inc. All Rights Reserved.      |
+-----+
- Bootblock checksum .... ok
- Module checksums ..... ok
- NVIDIA HDCP   : Rom Hole 2   Protected!
- NVIDIA NUMM   : Rom Hole 1   Programed!
- Erasing flash ..... done
- Writing flash ..... done
- Verifying flash ..... done
- Erasing NVRAM ..... done
- Writing NVRAM ..... done
- Verifying NVRAM ..... done
- Erasing Bootblock .... done
- Writing Bootblock .... done
- Verifying Bootblock ... done
- ROM file Optimal CMOS defaults were loaded.
- Program ended normally.
```

4. Auto restart after flash BIOS.